



REF #	PART #	PART NAME	REF #	PART #	PART NAME	REF #	PART #	PART NAME
1	20479827	Front panel (Type A)	24	20479573	Burner thermistor	47	20474166	Nut B
2	20479828	Front panel (Type B)	25	20479518	Igniter	48	20474039	Insulator A
3	20479860	Top plate assembly	26	17185580	Igniter gasket	49	20479891	Standard flue pipe
4	20479777	Indicator lamp circuit	27	20474920	Igniter cover	50	20474977	Hose band
5	20478373	Thermistor	28	20478026	Fuel nozzle	51	20479584	Bent joint
6	20475535	Power supply cord	29	20479885	Outside nozzle gasket	52	20474975	L-shaped hose
7	20479846	Cabinet assembly	30	20479883	Fuel nozzle gasket	53	20474951	Intake pipe
8	20479851	Rear guard	31	17185327	Window gasket	54	20474925	Oil catch
9	20479850	Rear guard top	32	17185314	Peep window	55	20450120	Screw for igniter unit
10	20479840	Circulation air filter	33	20479521	Igniter guide gasket	56	20474052	Screw E
11	20479829	Drip tray	34	20479837	Blower motor assembly	57	20474048	Screw B
12	20479852	Leveler fuel pipe	35	20479574	Blower motor gasket	58	20476452	Screw B2
13	10005597	Fusible link valve	36	20478317	Transformer	59	20475553	Screw 1P
14	20479568	Air joint gasket	37	20479612	Main circuit board	60	20474050	Screw C
15	20479531	Relief spring	38	20477414	PCB support	61	20474055	Screw O
16	20479530	Pressure relief plate	39	20478306	High limit switch	62	20478355	Screw 1Z
17	20479591	Relief gasket	40	20479819	Fuel pump	63	20455862	Screw S2
18	20479844	Heat exchanger	41	20479886	Draft tube	64	20479511	Flame rod gasket
19	20478343	Burner ring	42	20479841	Fuel pipe assembly	65	20479866	Air damper
20	20479893	Heat exchanger gasket	43	20478534	Fuel sump	66	20479725	Oil guide
21	20479842	Burner assembly	44	20479803	Air intake fan	67	20479793	Instruction manual
22	20479894	Burner gasket	45	20474171	Circulation fan	68	20479797	Carton
23	20479811	Primary flame rod	46	20479869	Circulation fan motor			