


How to Verify a Fuel Pump is Working By Testing the Fuel Pump Coil

Applies to:

Toyotomi Laser Models: 301, 302, 531, 532, 731, 732

Toyostove Laser Models: 300, 530, 730

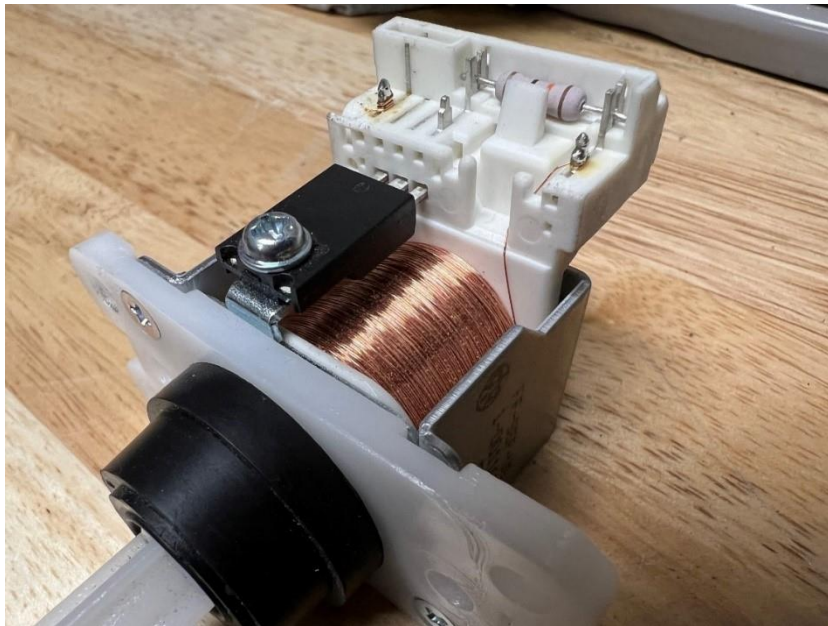

1. Disconnect the wire from the fuel pump.
2. Using a voltmeter take a reading from the 2 pins marked with arrows.
3. The reading should be $95\Omega \pm 25\Omega$. If the reading is higher or lower, you will need to replace the fuel pump.

WARNING

Rural Energy Enterprises, Inc. does not accept liability for the improper use of this information. Installation, service, and maintenance of heating equipment should be performed by a qualified technician. Improper installation, adjustment, alteration, service, or maintenance can cause property damage, personal injury, or loss of life.