



# Toyostove & Oil Miser Error Code EE EE

---

## **WARNING**

*Rural Energy Enterprises, Inc. does not accept liability for the improper use of this information. Installation, service, and maintenance of heating equipment should be performed by a qualified technician. Improper installation, adjustment, alteration, service, or maintenance can cause property damage, personal injury, or loss of life.*

**Toyostove Laser 30, Oil Miser 22, 23:** commercial electrical power problem- unplug for 30 minutes.

## **41 11**

**Toyostove Laser 30, Oil Miser 22, 23:** up or down button locked down when stove was plugged into electrical outlet. Check up or down buttons to see if they are stuck in down position. Unplug for 30 minutes. If this does not work, see next instruction line.

**Toyostove Laser 30:** Unplug stove, remove front panel, remove top panel, and disconnect indicator circuit board from main circuit board. This should erase Error code 41, 11.

**Oil Miser 22, 23:** Unplug stove, remove front panel, and disconnect indicator circuit board from main circuit board. This should erase Error code 41, 11.