

## How to Remove the Operation Panel and Store it while Plugged In - for TOYOTOMI and Toyostove Laser Vented Heaters

### **Applies to models:**

**Toyotomi Laser Heaters: L-731, L-732**

**Toyostove Laser Heaters: L-560, L730**

### **Step 1: Detach the Front Cover with Care**

Gently remove the Front Cover to access the internal components of the device.



### **Step 2: Ensure Proper Removal of the Front Cover**

Verify that the Front Cover has been removed correctly by examining its appearance after detachment.



### **WARNING**

Rural Energy Enterprises, Inc. does not accept liability for the improper use of this information. Installation, service, and maintenance of heating equipment should be performed by a qualified technician. Improper installation, adjustment, alteration, service, or maintenance can cause property damage, personal injury, or loss of life.

### **Step 3: Handling the Ribbon Cable Connection**

Note that the Ribbon cable remains connected to the Main Control Board even after removing the Front Cover. If excessive force is applied while removing the Front Cover and the cable becomes disconnected, it can easily be reattached without significant impact.



### **Step 4: Managing the Operational State of the Heater**

If the Heater is connected to a wall outlet, it will remain operational during this process. However, it cannot be controlled temporarily.

### **Step 5: Precautions to Avoid Operational Issues**

To prevent any operational issues, it is advisable to remove the Operation Panel before detaching the Front Panel. Alternatively, the Operation Panel can be removed after removing the Front Panel, and the Ribbon cable can be reconnected securely.

### **Step 6: Proper Alignment of the Ribbon Cable**

When reconnecting the Ribbon Cable, ensure that the blue-colored side is facing the right side of the connector. Take care not to bend or damage the cable during this process.

#### **WARNING**

Rural Energy Enterprises, Inc. does not accept liability for the improper use of this information. Installation, service, and maintenance of heating equipment should be performed by a qualified technician. Improper installation, adjustment, alteration, service, or maintenance can cause property damage, personal injury, or loss of life.

### **Step 7: Releasing the Display Panel**

Locate the two tabs on the inside of the Panel, push them, and gently tilt the Display forward. This will allow you to remove the Display Panel safely.




Locate the two tabs on the inside of the Panel, push them, and gently tilt the Display forward. This will allow you to remove the Display Panel safely.

### **Step 8: Storage of the Operation Panel**

Consider the appropriate storage location for the Operation Panel while working on the unit. Keep in mind that the Ribbon Cable has limited length.

### **Step 9: Avoiding Damage during Storage**

To prevent any damage to the Operation Panel and the Main Control Board, avoid laying the Display Panel on the Heater, as the electrical connections at the back may cause a short circuit. Instead, place the Display Panel upside down on the Top Panel or use a protective piece of cardboard as a safeguard.

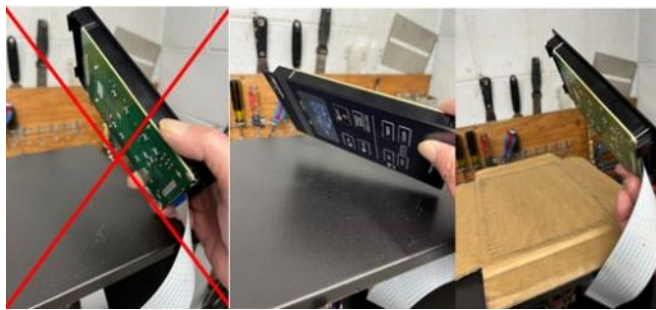

#### **WARNING**

Rural Energy Enterprises, Inc. does not accept liability for the improper use of this information. Installation, service, and maintenance of heating equipment should be performed by a qualified technician. Improper installation, adjustment, alteration, service, or maintenance can cause property damage, personal injury, or loss of life.



6637 Arctic Spur Rd. Anchorage, AK 99518  
P. 907.278.7441 / 800.770.7330 (toll-free)  
F. 907.868.1766

### **Step 10: Disconnecting the Heater from the Power Source (Optional)**

If preferred, you can also unplug the Heater from its power source to ensure complete safety during the process.

#### **WARNING**

Rural Energy Enterprises, Inc. does not accept liability for the improper use of this information. Installation, service, and maintenance of heating equipment should be performed by a qualified technician. Improper installation, adjustment, alteration, service, or maintenance can cause property damage, personal injury, or loss of life.